

MULTI PAR COB 1 SET

DMX CONTROL TABLE



3-CHANNEL MODE		
CHANNEL	VALUE	FUNCTION
CH1	000 - 255	Red (0 - 100%)
CH2	000 - 255	Green (0 - 100%)
CH3	000 - 255	Blue (0 - 100%)

4-CHANNEL MODE							
CH1 = (Light 1)		CH2 = (Light 2)		CH3 = (Light 3)		CH4 = (Light 4)	
000 - 255	Colour macro	000 - 255	Colour macro	000 - 255	Colour macro	000 - 255	Colour macro
000 - 004	Blackout	000 - 004	Blackout	000 - 004	Blackout	000 - 004	Blackout
005 - 036	Red	005 - 036	Red	005 - 036	Red	005 - 036	Red
037 - 073	Green	037 - 073	Green	037 - 073	Green	037 - 073	Green
074 - 110	Blue	074 - 110	Blue	074 - 110	Blue	074 - 110	Blue
111 - 147	Yellow	111 - 147	Yellow	111 - 147	Yellow	111 - 147	Yellow
148 - 184	Magenta	148 - 184	Magenta	148 - 184	Magenta	148 - 184	Magenta
185 - 221	Cyan	185 - 221	Cyan	185 - 221	Cyan	185 - 221	Cyan
222 - 255	White	222 - 255	White	222 - 255	White	222 - 255	White

5-CHANNEL MODE		
CHANNEL	VALUE	FUNCTION
CH1	000 - 255	Red (0 - 100%)
CH2	000 - 255	Green (0 - 100%)
CH3	000 - 255	Blue (0 - 100%)
CH4	000 - 127	Power Out 1 OFF
	128 - 255	Power Out 1 ON
CH5	000 - 127	Power Out 2 OFF
	128 - 255	Power Out 2 ON

6-CHANNEL MODE		
CHANNEL	VALUE	FUNCTION
CH1	000 - 255	Red 1 + 2 (0 - 100%)
CH2	000 - 255	Green 1 + 2 (0 - 100%)
CH3	000 - 255	Blue 1 + 2 (0 - 100%)
CH4	000 - 255	Red 3 + 4 (0 - 100%)
CH5	000 - 255	Green 3 + 4 (0 - 100%)
CH6	000 - 255	Blue 3 + 4 (0 - 100%)

7-CHANNEL MODE		
CHANNEL	VALUE	FUNCTION
CH1	000 - 255	Red (0 - 100%)
CH2	000 - 255	Green (0 - 100%)
CH3	000 - 255	Blue (0 - 100%)
CH4	000 - 255	Master Dimmer (0 - 100%)
CH5	000	Colour setting channel 1 - 3
	001 - 128	Music control (sensitivity weak - strong)
	129 - 255	Strobe (slow - fast)
CH6	000 - 127:	Power Out 1 OFF
	128 - 255	Power Out 1 ON
CH7	000 - 127:	Power Out 2 OFF
	128 - 255	Power Out 2 ON

8-CHANNEL MODE							
CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
000 - 015 CH4 - CH6 RGB	Master Dimmer (000 - 255)	000 = no function 001 - 255 Strobe (slow - fast)	Red (000 - 255 / CHANNEL 1: 000 - 015)	Green (000 - 255 / CHANNEL 1: 000 - 015)	Blue (000 - 255 / CHANNEL 1: 000 - 015)	000 - 127: Power Out 1 OFF	000 - 127: Power Out 2 OFF
16-23 R							
24-31 G							
32-39 B							
40-47 RG							
48-55 GB							
56-63 RB							
64-71 RGB							
072 - 079 Colour 1							
080 - 087 Colour 2							
088 - 095 Colour 3							
096 - 103 Colour 4							
104 - 111 Colour 5							
112 - 119 Colour 6							
120 - 127 Colour 7							
128 - 135 Colour 8							
136 - 143 Dream	000 - 255 Speed (slow - fast)					128 - 255: Power Out 1 ON	128 - 255: Power Out 2 ON
144 - 151 Meteor							
152 - 159 Fade							
160 - 167 Change							

8-CHANNEL MODE										
CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8			
168 - 175 Flow1	000 - 255 Speed (slow - fast)	000 = no function 001 - 255 Strobe (slow - fast)	Red (000 - 255 / CHANNEL 1: 000 - 015)	Green (000 - 255 / CHANNEL 1: 000 - 015)	Blue (000 - 255 / CHANNEL 1: 000 - 015)	128 - 255: Power Out 1 ON	128 - 255: Power Out 2 ON			
176 - 183 Flow2										
184 - 191 Flow3										
192 - 199 Flow4										
200 - 207 Flow5			000 - 255 8 colour variations	000 - 255 8 colour variations						
208 - 215 Flow6										
216 - 223 Flow7			000 - 255 8 colour variations	000 - 255 8 colour variations						
224 - 231 Flow8										
232 - 239 Flow9	Sensitivity (000 - 255)									
240 - 255 Music Control										

12-CHANNEL MODE		
CHANNEL	VALUE	FUNCTION
CH1	000 - 255	Red 1 (0 - 100%)
CH2	000 - 255	Green 1 (0 - 100%)
CH3	000 - 255	Blue 1 (0 - 100%)
CH4	000 - 255	Red 2 (0 - 100%)
CH5	000 - 255	Green 2 (0 - 100%)
CH6	000 - 255	Blue 2 (0 - 100%)
CH7	000 - 255	Red 3 (0 - 100%)
CH8	000 - 255	Green 3 (0 - 100%)
CH9	000 - 255	Blue 3 (0 - 100%)
CH10	000 - 255	Red 4 (0 - 100%)
CH11	000 - 255	Green 4 (0 - 100%)
CH12	000 - 255	Blue 4 (0 - 100%)

17-CHANNEL MODE													
CH1	CH2	CH3	CH4	CH5	CH6	CH15	CH16	CH17					
000 - 015 CH4 - CH15 RGB	Master Dimmer (000 - 255)	000 = no function 001 - 255 Strobe (slow - fast)	Red 1 (000 - 255 / CHANNEL 1: 000 - 015)	Green 1 (000 - 255 / CHANNEL 1: 000 - 015)	Blue 1 (000 - 255 / CHANNEL 1: 1: 000 - 015)	Blue 4 (000 - 255 / CHANNEL 1: 000 - 015)	000 - 127: Power Out 1 OFF	000 - 127: Power Out 2 OFF					
16-23 R													
24-31 G													
32-39 B													
40-47 RG													
48-55 GB													
56-63 RB													
64-71 RGB													
072 - 079 Colour 1													
080 - 087 Colour 2													
088 - 095 Colour 3													
096 - 103 Colour 4													
104 - 111 Colour 5													
112 - 119 Colour 6													
120 - 127 Colour 7													
128 - 135 Colour 8													
136 - 143 Dream	000 - 255 Speed (slow - fast)											128 - 255: Power Out 1 ON	128 - 255: Power Out 2 ON
144 - 151 Meteor													
152 - 159 Fade													
160 - 167 Change													
168 - 175 Flow1													
176 - 183 Flow2													
184 - 191 Flow3													
192 - 199 Flow4													
200 - 207 Flow5													
208 - 215 Flow6													
216 - 223 Flow7													
224 - 231 Flow8	000 - 255 8 colour variations		000 - 255 8 colour variations										
232 - 239 Flow9	000 - 255 8 colour variations		000 - 255 8 colour variations										
240 - 255 Music control	Sensitivity (000 - 255)												