

LED DROPIX

DMX CONTROL TABLE



3-CHANNEL MODE		
CHANNEL	VALUE	FUNCTION
CH1	000 - 007	No function
	008 - 255	Red (0-100%)
CH2	000 - 007	No function
	008 - 255	Green (0-100%)
CH3	000 - 007	No function
	008 - 255	Blue (0-100%)

5-CHANNEL MODE		
CHANNEL	VALUE	FUNCTION
CH1	000 - 007	No function
	008 - 255	Master Dimmer
CH2	000 - 010	No function
	011 - 255	Strobe (slow - fast)
CH3	000 - 007	No function
	008 - 255	Red (0-100%)
CH4	000 - 007	No function
	008 - 255	Green (0-100%)
CH5	000 - 007	No function
	008 - 255	Blue (0-100%)

8-CHANNEL MODE		
CHANNEL	VALUE	FUNCTION
CH1	000 - 007	No function
	008 - 255	Master Dimmer
CH2	000 - 010	No function
	011 - 255	Strobe (slow - fast)
CH3	000 - 007	No function
	008 - 255	Red (0-100%)
CH4	000 - 007	No function
	008 - 255	Green (0-100%)
CH5	000 - 007	No function
	008 - 255	Blue (0-100%)

CH6 Master Dimmer CH1 = 000 CH6 has priority over CH7	000 - 015	No function
	016 - 031	Program 1
	032 - 047	Program 2
	048 - 063	Program 3
	064 - 079	Program 4
	080 - 095	Program 5
	096 - 111	Program 6
	112 - 127	Program 7
	128 - 143	Program 8
	144 - 159	Program 9
	160 - 175	Program 10
	176 - 191	Program 11
	192 - 207	Program 12
	208 - 223	Program 13
	224 - 239	Program 14
CH7 Master Dimmer CH1 = 000 CH6 has priority over CH7	240 - 255	Program 15
	000 - 015	No function
	016 - 031	Program 16
	032 - 047	Program 17
	048 - 063	Program 18
	064 - 079	Program 19
	080 - 095	Program 20
	096 - 111	Program 21
	112 - 127	Program 22
	128 - 143	Program 23
	144 - 159	Program 24
	160 - 175	Program 25
	176 - 191	Program 26
	192 - 207	Program 27
	208 - 223	Program 28
CH8	224 - 239	Program 29
	240 - 255	Program 30
CH8	000 - 255	Program speed
		(slow - fast)