

GOBO SCANNER 25

DMX CONTROL TABLE



CHANNEL	FUNCTION	DMX VALUE	FEATURE
CH1	PAN	0-255	Pan Movement
CH2	TILT	0-255	Tilt Movement
CH3	Colour Wheel	0-13	White
		14-27	Yellow
		28-41	Pink
		42-55	Green
		56-69	Purple
		70-83	Blue
		84-97	LightGreen
		98-111	Orange
		112-127	Red
		128-190	Forwards rainbow effect with increasing speed
		191-255	Backwards rainbow effect with increasing speed
CH4	Gobo Wheel	0-8	Open
		9-17	Gobo 1
		18-26	Gobo 2
		27-35	Gobo 3
		36-44	Gobo 4
		45-53	Gobo 5
		54-62	Gobo 6
		63-79	Gobo 7
		72-80	Gobo 8
		81-89	Gobo 9
		90-98	Gobo 10
		99-107	Gobo 11
		108-116	Gobo 1 shake
		117-125	Gobo 2 shake
		126-134	Gobo 3 shake
		135-143	Gobo 4 shake
		144-152	Gobo 5 shake
		153-161	Gobo 6 shake
		162-170	Gobo 7 shake
		171-179	Gobo 8 shake
		180-188	Gobo 9 shake
		189-197	Gobo 10 shake
		198-206	Gobo 11 shake
		207-255	Rot. gobo wheel cont. rotation slow to fast
CH5	Shutter	0-9	closed
		10-19	open
		20-127	Strobe effect 1 with increasing speed
		128-137	open
		138-201	strobe effect 2 with increasing speed
		202-255	open
CH6	Dimmer	0-255	Intensity 0 to 100%

CH7	Function/ Program	0-59	Reserved
		60-79	colour Motor and gobo Motor reset
		80-99	all Motor reset
		100-119	Run with Internal program 1 built-in
		120-139	Run with Internal program 2 built-in
		140-159	Run with Internal program 3 built-in
		160-179	Run with Internal program 4 built-in
		180-199	Run with Internal program 5 built-in
		200-219	Run with Internal program 6 built-in
		220-239	Run with Internal program 7 built-in
		240-255	Run with Internal program 8 built-in