

MULTI FX BAR

DMX CONTROL TABLE



2 CH Mode						
Ch.	Function	Values				Sub-Group
1	Auto Program	000	-	005	Blackout	Auto Program
		006	-	010	Auto Mix 1	
		011	-	015	Auto Mix 2	
		016	-	020	Auto Mix 3	
		021	-	025	Auto Mix 4	
		030	-	035	Auto Mix 5	
		036	-	040	Auto Mix 6	
		041	-	045	Auto Mix 7	
		046	-	050	Auto Mix 8	
		051	-	055	Auto Mix 9	
		056	-	070	Auto Mix 10	
		071	-	075	Auto Par 1	
		076	-	080	Auto Par 2	
		081	-	085	Auto Par 3	
		086	-	090	Auto Par 4	
		091	-	095	Auto Par 5	
		096	-	100	Auto Derby 1	
		101	-	105	Auto Derby 2	
		106	-	110	Auto Derby 3	
		111	-	115	Auto Derby 4	
		116	-	120	Auto Derby 5	
		121	-	125	Auto Par & Derby 1	
		126	-	130	Auto Par & Derby 2	
		131	-	135	Auto Par & Derby 3	
		136	-	140	Auto Par & Derby 4	
		141	-	145	Auto Par & Derby 5	
		146	-	150	Auto Par & Derby 6	
		151	-	155	Auto Par & Derby 7	
		156	-	160	Auto Par & Derby 8	
		161	-	165	Auto Par & Derby 9	
		166	-	170	Auto Par & Derby 10	
		171	-	175	Auto Flash Lights 1	
176	-	180	Auto Flash Lights 2			
181	-	185	Auto Flash Lights 3			
186	-	190	Auto Flash Lights 4			
191	-	195	Auto Flash Lights 5			
196	-	200	Auto Flash Lights 6			
201	-	205	Auto Flash Lights 7			
206	-	210	Auto Flash Lights 8			
211	-	215	Auto Flash Lights 9			
216	-	220	Auto Flash Lights 10			

1	Auto Program	221	-	225	Auto Laser 1	Auto Program
		226	-	230	Auto Laser 2	
		231	-	235	Auto Laser 3	
		236	-	240	Auto Laser 4	
		241	-	245	Auto Laser 5	
		246	-	255	Auto Laser 6	
2	Auto Program Speed/Sound	000	-	127	Program Speed slow -> fast	Auto Program Speed/Sound
		128	-	255	Sound Control	

5 CH Mode						
Ch.	Function	Values				Sub-Group
1	Auto Program LED Par	000	-	005	Blackout	Auto Program
		006	-	056	Auto Par 1	
		057	-	107	Auto Par 2	
		108	-	158	Auto Par 3	
		159	-	209	Auto Par 4	
		208	-	255	Auto Par 5	
2	Auto Program Derby	000	-	005	Blackout	
		006	-	056	Auto Derby 1	
		057	-	107	Auto Derby 2	
		108	-	158	Auto Derby 3	
		159	-	209	Auto Derby 4	
		208	-	255	Auto Derby 5	
3	Auto Program Flash Lights	000	-	005	Blackout	
		006	-	025	Auto Flash Lights 1	
		026	-	050	Auto Flash Lights 2	
		051	-	075	Auto Flash Lights 3	
		076	-	100	Auto Flash Lights 4	
		101	-	125	Auto Flash Lights 5	
		126	-	150	Auto Flash Lights 6	
		151	-	175	Auto Flash Lights 7	
		176	-	200	Auto Flash Lights 8	
		201	-	225	Auto Flash Lights 9	
4	Auto Program Laser	226	-	255	Auto Flash Lights 10	
		000	-	005	Blackout	
		006	-	046	Auto Laser 1	
		047	-	080	Auto Laser 2	
		081	-	120	Auto Laser 3	
		121	-	140	Auto Laser 4	
5	Auto Program Speed/Sound	141	-	180	Auto Laser 5	
		181	-	255	Auto Laser 6	
		000	-	127	Program Speed slow -> fast	Auto Program Speed/Sound
		128	-	255	Sound Control	

29 CH Mode						
Ch.	Function	Values				Sub-Group
1	Derby 1	000	-	255	0% to 100%	Red
2		000	-	255	0% to 100%	Green
3		000	-	255	0% to 100%	Blue
4		000	-	005	Strobe open	Strobe
		006	-	255	Strobe speed slow-> fast <1Hz-20Hz	
5		000	-	004	Stop	Rotate
		005	-	127	Rotate clockwise slow -> fast	
		128	-	132	Stop	
		133	-	255	Rotate anticlockwise slow -> fast	
6		Derby 2	000	-	255	0% to 100%
7	000		-	255	0% to 100%	Green
8	000		-	255	0% to 100%	Blue
9	000		-	005	Strobe open	Strobe
	006		-	255	Strobe speed slow-> fast <1Hz-20Hz	
10	000		-	004	Stop	Rotate
	005		-	127	Rotate clockwise slow -> fast	
	128		-	132	Stop	
	133		-	255	Rotate anticlockwise slow -> fast	
11	Par 1		000	-	255	0% to 100%
12		000	-	255	0% to 100%	Green
13		000	-	255	0% to 100%	Blue
14		000	-	255	0% to 100%	UV
15		000	-	005	Blackout	Strobe
		006	-	010	Strobe open	
		011	-	255	Strobe speed slow-> fast <1Hz-20Hz	
16	Par 2	000	-	255	0% to 100%	Red
17		000	-	255	0% to 100%	Green
18		000	-	255	0% to 100%	Blue
19		000	-	255	0% to 100%	UV
20		000	-	005	Blackout	Strobe
		006	-	010	Strobe open	
		011	-	255	Strobe speed slow-> fast <1Hz-20Hz	
21	Laser Red	000	-	005	Blackout	Strobe
		006	-	010	Strobe open	
		011	-	255	Strobe speed slow-> fast <1Hz-20Hz	
22	Laser Green	000	-	005	Blackout	Strobe
		006	-	010	Strobe open	
		011	-	255	Strobe speed slow-> fast <1Hz-20Hz	

23	Laser	000	-	004	Stop	Rotate
		005	-	127	Rotate clockwise slow -> fast	
		128	-	132	Stop	
		133	-	255	Rotate anticlockwise slow -> fast	
24	Flash Light 1	000	-	005	Blackout	Strobe
		006	-	010	Strobe open	
		011	-	255	Strobe speed slow-> fast <1Hz-20Hz	
25	Flash Light 2	000	-	005	Blackout	
		006	-	010	Strobe open	
		011	-	255	Strobe speed slow-> fast <1Hz-20Hz	
26	Flash Light 3	000	-	005	Blackout	
		006	-	010	Strobe open	
		011	-	255	Strobe speed slow-> fast <1Hz-20Hz	
27	Flash Light 4	000	-	005	Blackout	
		006	-	010	Strobe open	
		011	-	255	Strobe speed slow-> fast <1Hz-20Hz	

28	Auto Program	000	-	005	Blackout	Auto Program
		006	-	010	Auto Mix 1	
		011	-	015	Auto Mix 2	
		016	-	020	Auto Mix 3	
		021	-	025	Auto Mix 4	
		030	-	035	Auto Mix 5	
		036	-	040	Auto Mix 6	
		041	-	045	Auto Mix 7	
		046	-	050	Auto Mix 8	
		051	-	055	Auto Mix 9	
		056	-	070	Auto Mix 10	
		071	-	075	Auto Par 1	
		076	-	080	Auto Par 2	
		081	-	085	Auto Par 3	
		086	-	090	Auto Par 4	
		091	-	095	Auto Par 5	
		096	-	100	Auto Derby 1	
		101	-	105	Auto Derby 2	
		106	-	110	Auto Derby 3	
		111	-	115	Auto Derby 4	
		116	-	120	Auto Derby 5	
		121	-	125	Auto Par & Derby 1	
		126	-	130	Auto Par & Derby 2	
		131	-	135	Auto Par & Derby 3	
		136	-	140	Auto Par & Derby 4	
		141	-	145	Auto Par & Derby 5	
		146	-	150	Auto Par & Derby 6	
		151	-	155	Auto Par & Derby 7	
		156	-	160	Auto Par & Derby 8	
		161	-	165	Auto Par & Derby 9	
		166	-	170	Auto Par & Derby 10	
		171	-	175	Auto Flash Lights 1	
		176	-	180	Auto Flash Lights 2	
		181	-	185	Auto Flash Lights 3	
		186	-	190	Auto Flash Lights 4	
		191	-	195	Auto Flash Lights 5	
		196	-	200	Auto Flash Lights 6	
		201	-	205	Auto Flash Lights 7	
		206	-	210	Auto Flash Lights 8	
		211	-	215	Auto Flash Lights 9	
		216	-	220	Auto Flash Lights 10	
		221	-	225	Auto Laser 1	
		226	-	230	Auto Laser 2	
		231	-	235	Auto Laser 3	
		236	-	240	Auto Laser 4	
		241	-	245	Auto Laser 5	
		246	-	255	Auto Laser 6	
29	Auto Program Speed/Sound	000	-	127	Program Speed slow -> fast	Auto Program Speed/Sound
		128	-	255	Sound Control	