

FLAT PRO SPOTIX 4 / 7

DMX CONTROL TABLE



2-CH Mode (CLFLATPROSP4 & CLFLATPROSP7)					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
		129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
		193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12

3-CH Mode 1 (CLFLATPROSP4 & CLFLATPROSP7)					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	249	Strobe slow -> fast 0Hz - 20Hz
		250	-	255	Strobe open
CH3	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
		129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
		193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12

3-CH Mode 2 (CLFLATPROSP4 & CLFLATPROSP7)					
CH1	Red	000	-	255	0% to 100%
CH2	Green	000	-	255	0% to 100%
CH3	Blue	000	-	255	0% to 100%

9-CH Mode (CLFLATPROSP4)					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (very short flash)
		128	-	249	Strobe slow -> fast 0Hz - 20Hz
		250	-	255	Strobe open
CH3	Red	000	-	255	0% to 100%
CH4	Green	000	-	255	0% to 100%
CH5	Blue	000	-	255	0% to 100%

CH6	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
		129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
		193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12
CH7	Colour Temperature Correction (add to RGB and Colour Macro)	000	-	005	off
		006	-	255	cold to warm
CH8	Pattern	000	-	005	Pattern off
		006	-	031	Single spot rotating
		032	-	063	Dual spot rotating (one Colour)
		064	-	095	Dual spot rotating (two Colours)
		096	-	127	Dual spots color change (two Colour)
		128	-	159	Dual spots color step (two Colours)
		160	-	191	Meteor effect
		192	-	223	Random dot effect
		224	-	255	Colour blot effect

18-CH Mode (CLFLATPROSP4)					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (very short flash)
		128	-	249	Strobe slow -> fast 0Hz - 20Hz
		250	-	255	Strobe open
CH3	Red 1	000	-	255	0% to 100%
CH4	Green 1	000	-	255	0% to 100%
CH5	Blue 1	000	-	255	0% to 100%
CH6	Red 2	000	-	255	0% to 100%
CH7	Green 2	000	-	255	0% to 100%
CH8	Blue 2	000	-	255	0% to 100%
CH9	Red 3	000	-	255	0% to 100%
CH10	Green 3	000	-	255	0% to 100%
CH11	Blue 3	000	-	255	0% to 100%
CH12	Red 4	000	-	255	0% to 100%
CH13	Green 4	000	-	255	0% to 100%
CH14	Blue 4	000	-	255	0% to 100%
CH15	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
		129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
		193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12
CH16	Colour Temperature Correction (add to RGB and Colour Macro)	000	-	005	off
		006	-	255	cold to warm

CH17	Pattern	000	-	005	Pattern off
		006	-	031	Single spot rotating
		032	-	063	Dual spot rotating (one Colour)
		064	-	095	Dual spot rotating (two Colours)
		096	-	127	Dual spots color change (two Colour)
		128	-	159	Dual spots color step (two Colours)
		160	-	191	Meteor effect
		192	-	223	Random dot effect
CH18	Sound	224	-	255	Colour blot effect
		000	-	005	Sound Control OFF (Mic Sensitivity)
		006	-	255	Sound Control ON Low -> High (Mic Sensitivity)

6 -CH Mode (CLFLATPROSP7)					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (very short flash)
		128	-	249	Strobe slow -> fast 0Hz - 20Hz
CH3	Red	250	-	255	Strobe open
		000	-	255	0% to 100%
CH4	Green	000	-	255	0% to 100%
CH5	Blue	000	-	255	0% to 100%
CH6	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
		129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
		193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12

9-CH Mode (CLFLATPROSP7)					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (very short flash)
		128	-	249	Strobe slow -> fast 0Hz - 20Hz
		250	-	255	Strobe open
CH3	Red	000	-	255	0% to 100%
CH4	Green	000	-	255	0% to 100%
CH5	Blue	000	-	255	0% to 100%
CH6	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
		129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
		193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12
CH7	Colour Temperature Correction (add to RGB and Colour Macro)	000	-	005	off
		006	-	255	cold to warm

CH8	Pattern	000	-	005	Pattern off
		006		031	Single spot rotating
		032	-	063	Dual spot rotating (one Colour)
		064	-	095	Dual spot rotating (two Colours)
		096	-	127	Three spots rotating (one Colour)
		128	-	159	Three spots rotating (two Colours)
		160	-	191	Meteor effect
		192	-	223	Random dot effect
CH9	Sound	224	-	255	Colour blot effect
		000	-	005	Sound Control OFF (Mic Sensitivity)
		006	-	255	Sound Control ON Low -> High (Mic Sensitivity)

27-CH Mode (CLFLATPROSP7)					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (very short flash)
		128	-	249	Strobe slow -> fast 0Hz - 20Hz
		250	-	255	Strobe open
CH3	Red 1	000	-	255	0% to 100%
CH4	Green 1	000	-	255	0% to 100%
Ch5	Blue 1	000	-	255	0% to 100%
CH6	Red 2	000	-	255	0% to 100%
CH7	Green 2	000	-	255	0% to 100%
CH8	Blue 2	000	-	255	0% to 100%
CH9	Red 3	000	-	255	0% to 100%
Ch10	Green 3	000	-	255	0% to 100%
Ch11	Blue 3	000	-	255	0% to 100%
CH12	Red 4	000	-	255	0% to 100%
CH13	Green 4	000	-	255	0% to 100%
CH14	Blue 4	000	-	255	0% to 100%
CH15	Red 5	000	-	255	0% to 100%
CH16	Green 5	000	-	255	0% to 100%
CH17	Blue 5	000	-	255	0% to 100%
CH18	Red 6	000	-	255	0% to 100%
CH19	Green 6	000	-	255	0% to 100%
CH20	Blue 6	000	-	255	0% to 100%
CH21	Red 7	000	-	255	0% to 100%
CH22	Green 7	000	-	255	0% to 100%
CH23	Blue 7	000	-	255	0% to 100%

CH24	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
		129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
		193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12
CH25	Colour Temperature Correction (add to RGB and Colour Macro)	000	-	005	off
		006	-	255	cold to warm
CH26	Pattern	000	-	005	Pattern off
		006	-	031	Single spot rotating
		032	-	063	Dual spot rotating (one Colour)
		064	-	095	Dual spot rotating (two Colours)
		096	-	127	Three spots rotating (one Colour)
		128	-	159	Three spots rotating (two Colours)
		160	-	191	Meteor effect
		192	-	223	Random dot effect
CH27	Sound	224	-	255	Colour blot effect
		000	-	005	Sound Control OFF (Mic Sensitivity)
		006	-	255	Sound Control ON Low -> High (Mic Sensitivity)